

# StationsApplyBack

## Declaration

```
void __stdcall StationsApplyBack(StationPar *St, void *Ap1PAr)
```

## Parameters

St	pointer to <a href="#">StationPar</a> structure
Ap1Par	void pointer (it is defined as one of the parameters of the function <a href="#">StationsApply</a> )

## Description

The function **StationsApplyBack** (`_StationsApplyBack@8` in the Stdcall calling convention) is optional. It is a response to calling the call-back functions [StationsApply](#). The function is called specially for all stations of the line defined in the parameter *LnId* of the function [StationsApply](#).



### Related pages:

[D2000 KomAPI - interface functions](#)