

License description

License

The option **License** is available from particular process ([D2000 CNF](#), [D2000 GrEditor](#), [D2000 HI](#)) - menu **Help** -> **License**.

The screenshot shows a window titled "Licencia D2000" with a tab labeled "Popis licencie". Inside, there is a table with three columns: "Licenčné číslo", "Rozsah licencie", and "Aktuálny stav". The table lists various license parameters and their values.

	Rozsah licencie	Aktuálny stav
Licenčné číslo	D200000406	
Produkt	OEM	
Expirácia licencie	neobmedzene	
Verzia	0.0	
Meno OEM partnera	Ipesoft	
Meno zákazníka	Ipesoft	
Meno aplikácie	Ipesoft application	
☒ Licenčný model		
Named devices	neobmedzene	1
Počet tenkých klientov	0	0
Počet tagov	neobmedzene	1602
Počet archívnych objektov	neobmedzene	57
Počet archívnych objektov	neobmedzene	57
☒ Počet systémových procesov		
Požadované iToken HW kľúče	nie	
Povinné CNF kľúče	nie	
High performance archiv	áno	
High availability system	áno	
High availability proces	áno	
DB engine	All	
Komunikačné protokoly	neobmedzene	

An "OK" button is located at the bottom right of the dialog box.

The individual items show the range and status of the licence. The license range depends on the level of D2000 Product, which a customer has purchased. We provides three basic levels:

- **D2000 Basic**
- **D2000 Standard**
- **D2000 Enterprise**

You can find detailed information about the parameters and products in the chapter [License range](#).



Related pages:

[Licensing the D2000 products](#)