## **Import parameters**

**Import parameters** are set at XML Import and XML Update. The setting of parameters influence a result of the mentioned actions.

Name	Meaning
DB_AS YNC	D2000 Server will not wait for the information about the finishing of record after all the data are prepared to be write into configuration (database).
UID_ST RICT	At the matching of objects or objects references it matches strictly on the basis of UID, if it is entered.
UID_US EXML	If the import means an object update and UID of object in XML file is different form UID of object in D2000 Server, UID from XML file will be used. The condition is that the parameter UID_STRICT must be off!
IGNR_C HECK	The check of correctness of the object configuration has been ignored. The import will be executed even if there is an error. <b>We do not recommend to activate this parameter!</b>
UPD_V ARS	The XML files representing the objects of user variable or structured variable type are imported.
GROUP _ADD	It determines whether the membership of objects in the group will be add according to list in XML file (at importing of logical group or object group). If not, the object membership will be replaced by the list from XML file.
IGNR_R EFS	The reserved section <refeerences> in XML file is ignored when importing. All the references to objects occurring in other sections will be searched according to name in the target configuration. The references do not contain the information about unique identifier of object (UID), object type and value type of referenced object.  A user should be sure the name is unique, the object type and value type of referenced object is not checked.  We recommend you to use this parameter only in reasoned situations!</refeerences>

(i) Related pages:

D2000 XML XML Parameters