

Imp

%Imp function

Old name

%Impl

Function

The function returns the accession of given integer value. The result is an integer value.

Declaration

```
INT %Imp(
    INT in Arg,
    BOOL in ResetTrigger
)
```

Parameters

Arg	Variable which accession is calculated. The function assumes, that the value of the variable Arg is increasing within the calculation interval. (For example: electrometer status).
ResetTrigger	Change of the parameter into the TRUE state resets the calculation.



Related pages:

[Implemented functions](#)

[Function arguments - types](#)