

ColumnMax

%ColumnMax function

Function

The function returns the highest value (maximum) of the valid values in the specified structure variable column.
Result is a real number.

Declaration

```
REAL %ColumnMax(  
    in StructVar
```

^

```
Column  
)
```

Parameters

StructVar	Object of Structured variable type.
Column	Column name.

Example

```
%ColumnMax(SV.Structure^Int)
```



Related pages:

[Implemented functions](#)

[Function arguments - types](#)