

StructRowStatAVG

%StructRowStatAVG function

Function

The function calculates the average value of all values of the row of the structured variable.

Declaration

```
REAL %StructRowStatAVG(  
    in StructVar[row]^Column,  
    INT in num_cols  
)
```

Parameters

Stru ctVar	Structured variable.
Colu mn	Column of the structured variable.
num _cols	Number of columns, which are included in calculation. If the parameter is < 0, then all columns from the column defined by the parameter <i>Column</i> will be included in the calculation.

Note

The function sets the user values as a sum for resulting value

Example

```
%StructRowStatAVG(SV.Structure^Int, 2)
```



Related pages:

[Implemented functions](#)

[Function arguments - types](#)