

# StructStatAVG

## %StructStatAVG function

### Function

The function calculates the average value from valid values of given structure variable column. Row range is defined by the parameters *first\_row* a *last\_row*.  
The result is a real number.

### Declaration

```
REAL %StructStatAVG(  
    in StructVar^Column,  
    INT in first_row,  
    INT in last_row  
)
```

### Parameters

<b>StructVar</b>	Structured variable.
<b>Column</b>	Structured variable column.
<b>first_row, last_row</b>	Range of rows in the column.

### Note

The function sets the user values as a sum for resulting value

### Example

```
%StructStatAVG(SV.Structure^Int, 4, 6)
```



#### Related pages:

[Implemented functions](#)  
[Function arguments - types](#)