

# ERR\_NR\_TRANS\_EX - List of existing errors

The following table contains the list of existing errors returned by the local variable `_ERR_NR_TRANS_EX`.

| Internal name   | Value | Description   |
|---|-------|---|
| <b>Error codes during work with system objects</b>  |       |   |
| OK  | 0     | OK.   |
| OBJECT_ALREADY_EXISTS   | 1     | Object already exists.  |
| OBJECT_NOT_FOUND  | 2     | Object does not exist.  |
| INVALID_ACCESS  | 3     | Insufficient access rights.   |
| SHARED_ACCESS_ERROR   | 4     | Access error when trying to edit (object is being edited by other user).            |
| OBJECT_NOT_OPENED   | 5     | Object is not open.   |
| OBJECT_IS_USED  | 6     | Object is used (when trying to delete it).  |
| INVALID_NAME  | 7     | Invalid object name.  |
| FATAL_ERROR   | 8     | Fatal error.  |
| OBJECT_IS_READ_ONLY   | 9     | Object is read-only (when trying to edit or delete it).                             |
| OBJECT_HAS_CHILDREN   | 10    | Object has children (when trying to delete it).                                     |
| SAVE_REFERENCES_ERROR   | 11    | Incorrect object references.  |
| LICENCE_LIMIT_OVERRUN   | 46    | Licence limit overrun (when trying to create a new object).                         |
| <b>Error codes for output control</b>   |       |   |
| MANUAL_CTRL_DISABLED  | 12    | Manual control disabled (when trying to set a value manually).                      |
| BAD_COMMAND   | 13    | Bad command.  |
| COMMAND_NOT_ACCEPTED  | 14    | Illegal command.  |
| PROCESS_NOT_RUNNING   | 15    | Process for execution of the command is not running.                                |
| <b>Error codes for configuration of <a href="#">topology</a></b>  |       |   |
| CREATE_NEW_ERROR  | 16    | Error during creation of a new object of <a href="#">Topology</a> type.             |
| BAD_PARENT  | 17    | Object has another parent.  |
| NAME_ALREADY_EXISTS   | 18    | Object with given name already exists - it is of other type.                        |
| BAD_CONNECT   | 19    | Inappropriate control object for topological node of <a href="#">Terminal</a> type. |
| <b>Error codes for user's logins</b>  |       |   |
| USER_INVALID_ACCESS   | 20    | Invalid access rights.  |
| LOGON_WRONG_PASSWORD  | 21    | Incorrect password.   |
| LOGON_NAME_ERROR  | 22    | Incorrect login name.   |
| PASSWORD_EXPIR_TIME   | 23    | Password validity has expired.  |
| USER_IS_DISABLED  | 24    | User login is disabled.   |
| USER_EXPIR_TIME   | 25    | Validity of user's account has expired.   |
| <b>Error codes for database backup</b>  |       |   |
| DATABASE_NOT_VALID  | 26    | Database not valid.   |
| BACKUP_FAILED   | 27    | Backup failed.  |
| OTHER_ERROR   | 28    | Other error.  |
| PATH_NOT_COMPLETE   | 29    | Path not complete.  |
| <b>Error codes for access to database ( <a href="#">D2000 Archiv</a>, <a href="#">D2000 DBManager</a>, <a href="#">D2000 Server</a> )</b> |       |   |
| ODBC_ERROR  | 34    | ODBC error.   |

| Error codes for connection to processes                            |    |  |
|--|----|--|
| INVALID_VERSION  | 30 | Incorrect version.   |
| PROCESS_RUN_DISABLED   | 31 | Cannot start process.  |
| PROCESS_LICENCE_DISABLED   | 32 | Cannot start process - insufficient licence.   |
| PROCESS_TCPIP_DENIED   | 33 | Cannot start process - IP address is denied.   |
| Error codes of process <a href="#">D2000 DBManager</a>             |    |  |
| PAGE_ERROR   | 35 | Page error (in case of page access to database).   |
| EDIT_DISABLED  | 36 | Editing disabled (when trying to write to a read-only table).  |
| DBM_SEQUENCE_ERROR   | 37 | <b>DBManager</b> sequence error (invalid object identifier, non-existing transaction, ...)   |
| DATABASE_OPEN_ERROR  | 38 | Open database error.   |
| BAD_CONDITION  | 39 | Bad conditions.  |
| TOO_MANY_ROWS_IN_SELECT  | 48 | Too many rows in selection (more than specified by the parameter <a href="#">Maximum returned rows</a> in the configuration of object of <a href="#">Database</a> type).   |
| DBM_CONNECTION_BROKEN_ERROR  | 49 | Connection with database has been interrupted.   |
| DBM_MAX_CONNECTIONS  | 50 | Maximum number of connection to the database has been reached (the parameter <a href="#">Maximum connections</a> in the configuration of object of <a href="#">Database</a> type), new connection has not been created.                                    |
| STRUCT_CHANGE  | 51 | Change of object of <a href="#">Structure definition</a> type in runtime (rows loaded from database do not correspond to the changed object of <a href="#">Structure definition</a> type and are not to be sent to process <a href="#">D2000 Server</a> ). |
| DBM_DATABASE_OFF   | 52 | Access denied: object of <a href="#">Database</a> type is set to OFF (the parameter <a href="#">Off</a> in the configuration of the object)  |
| Error codes of process <a href="#">D2000 Archiv</a>                |    |  |
| LOAD_TREZOR_ERROR  | 40 | Error in loading depository database.  |
| CREATE_WRT_FILE_ERROR  | 41 | Create WRT file error when importing Sybase depository database.   |
| OPEN_TREZOR_ERROR  | 42 | Error in opening depository database.  |
| CREATE_STATISTICS_ERROR  | 43 | Error in creating statistics file for archive.   |
| Error codes of Tell commands for process <a href="#">D2000 KOM</a> |    |  |
| DUPLICATE_ADDRESS_ERROR  | 44 | Duplicate address (when changing the address of I/O tag by using the Tell command <a href="#">SETPTADDR</a> )  |
| POINT_NOT_FOUND_ERROR  | 45 | I/O tag not found (for Tell command <a href="#">SETPTADDR</a> ).   |
| Error codes of process <a href="#">D2000 Application Manager</a>   |    |  |
| INVALID_DB_PASSWORD  | 47 | Invalid password for access to the configuration database.   |