

GetValueType

%GetValueType function

Function

The function gets back a value type that has been set as a parameter.

Declaration

```
INT %GetValueType(  
    UNIVAL in value  
)
```

Parameters

value	Value (variable or expression).
--------------	---------------------------------

Return value

Value type which has been set as a parameter.

Description

Possible return values:

Return value	Constant	Value description
1	@VTYPE_Bo	Boolean
3	@VTYPE_Re	Real
2	@VTYPE_Int	Integer
7	@VTYPE_TmA	Absolute time
8	@VTYPE_TmR	time interval
9	@VTYPE_Txt	Text
0	@VTYPE_NAN	No type

Example

```
TEXT _var  
  
INT _expValueType  
INT _varValueType  
  
_expValueType := %GetValueType("text value")  
_varValueType := %GetValueType(_var)
```



Related pages:

[Implemented function](#)
[Function arguments - types](#)