

Imp

%Imp function

Old name

%Impl

Function

The function returns the increment of a given integer value. The result is an integer value.

Declaration

```
INT %Imp(
    INT in Arg,
    BOOL in ResetTrigger
)
```

Parameters

Arg	A variable for which an increment is calculated. The function assumes, that the value of the variable Arg is increasing within the calculation interval. (For example electrometer status).
ResetTrigger	Change of the parameter into the TRUE state resets the calculation.



Related pages:

[Implemented functions](#)

[Function arguments - types](#)