

SetLimitStatus

%SetLimitStatus function

Old name	%SetLimitStatusV					
Function	The function sets the limit state according to the defined limits VLL, LL, HL, and VHL to a given expression value. The result is a value of the same type as the expression. Using the function is meaningful only in scripts for local variables.					
Declaration	<pre>UNIVAL %SetLimitStatus(in expression, in VLL, in LL, in HL, in VHL)</pre>					
Parameters	<table><tr><td>expression</td><td>Arbitrary expression.</td></tr><tr><td>VLL, LL, HL, VHL</td><td>Expressions defining individual limits.</td></tr></table>		expression	Arbitrary expression.	VLL, LL, HL, VHL	Expressions defining individual limits.
expression	Arbitrary expression.					
VLL, LL, HL, VHL	Expressions defining individual limits.					
Example	<pre>_locVar1 := %SetLimitStatus(U.K4_T02, 45, 60, 80, 115) _locVar2 := %SetLimitStatus(P.TlakSL5, U.VLL_S5, U.LL_S5, U.HL_S5, U. VHL_S5)</pre>					



Related pages:

- [Implemented functions](#)
- [Function arguments - types](#)