

ColumnAvg

%ColumnAvg function

Function

The function returns the average of the valid values in the specified structure variable column.
The result is a real number.

Declaration

```
REAL %ColumnAvg(  
    in StructVar
```

^

```
Column  
)
```

Parameters

StructVar	An object of Structured variable type.
Column	Column name.

Note

The function sets the user values as a sum for the resulting value

Example

```
%ColumnAvg(SV.Structure^Int)
```



Related pages:

[Implemented functions](#)
[Function arguments - types](#)