

HI_LNG_GetCurrLngIdx

%HI_LNG_GetCurrLngIdx, %HI_LNG_SetCurrLngIdx functions

Function

The function %HI_LNG_GetCurrLngIdx returns the identifier of the current language.

Declaration

The function %HI_LNG_SetCurrLngIdx allows to change the current language.

```
INT %HI_LNG_GetCurrLngIdx()  
  
%HI_LNG_SetCurrLngIdx(INT in lngIdx)
```

Parameters

None.

Return value

Return value is **Int** type.



Related pages:

[Active picture manipulation functions](#)
[Function arguments - types](#)