

# HI\_GetPictureScrollX

## %HI\_GetPictureScrollX function

---

**Function**

Function **%HI\_GetPictureScrollX** gets back the value of the upper left point of zooming scheme on axis X.

**Declaration**

```
%HI_GetPictureScrollX()
```

**Parameters**

No parameters.

**Note 1**

Function %HI\_GetPictureScroll after calling %HI\_SetPictureScroll gets back rounded value of the setting.

**Note 2**

This function is available also in [%HIX\\_ version](#).

---

**Related pages:**

[Active picture manipulation functions](#)  
[Function arguments - types](#)