

# HI\_SetCurrLayer

## %HI\_SetCurrLayer function

### Function

The function sets the current layer and zoom according to layer from the script.

### Declaration

```
%HI_SetCurrLayer(  
    INT in _layerNr,  
    INT in _x,  
    INT in _y  
)
```

### Parameters

<b>layerNr</b>	Sets the layer and zoom out according to layer.
<b>x</b>	X co-ordinate required zoom centre.
<b>y</b>	Y co-ordinate required zoom centre.

### Note 1

ZOOM will be adjusted according to close-up view. The area out of Picture will not be displayed.

### Note 2

This function is available also in [%HIX\\_ version](#).



### Related pages:

[Active picture manipulation functions](#)  
[Function arguments - type](#)