

# HI\_PrintWindow

## %HI\_PrintWindow function

### Function

The function allows to print the picture ([Control function](#)).

### Declaration

```
%HI_PrintWindow(  
    BOOL in bPreview := @TRUE  
)
```

### Parameters

#### bPreview

@TRUE - show the "Preview" dialog box before print.  
@FALSE - hide the "Preview" dialog box before print.

### Description

The function prints the picture, from which is called.

If the parameter *bPreview* is not specified or its value is @TRUE, there is to be opened the "Preview" dialog box in the process [D2000 HI](#).

If the parameter value is @FALSE the picture is to be printed without any necessary user's interactions.



#### Related pages:

[Active picture manipulation functions](#)  
[Function arguments - types](#)