

HI_EnableInOutVariables

%HI_EnableInOutVariables function

Function

The function enables/disables transferring the local input-output variables of the active picture when the picture is being closed.

Declaration

```
%HI_EnableInOutVariables(  
    BOOL in bEnable  
)
```

Parameters

bEnable	@TRUE - enable transfer. @FALSE - disable transfer.
----------------	--

Note 1

For more information on input-output local variables see the topic [Picture local variables](#).

Note 2

This function is available also in the [%HIX_ version](#).



Related pages:

[Active picture manipulation functions](#)
[Function arguments - types](#)