

HI_GoToLine

%HI_GoToLine function

Function

The function **%HI_GoToLine** sets the current cursor position in the multiline Windows control of [Text entry field](#) type to the given line ([Control function](#)).

Declaration

```
%HI_GoToLine(  
    INT in refId,  
    INT in lineNr  
)
```

Parameters

refId	Reference to graphic object (reference variable).
lineNr	Line number.

Example

```
%HI_GoToLine(_entryField, 2)
```



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)