

HI_SetColumnAlign, HI_GetColumnAlign

%HI_SetColumnAlign, %HI_GetColumnAlign functions

Function

The function **%HI_SetColumnAlign** sets a text alignment in a column (left/right/center) in the **Browser** displayer.

The function **%HI_GetColumnAlign** gets a text alignment in a column in the **Browser** displayer.

Declaration

```
%HI_SetColumnAlign(  
    INT in refId,  
    INT in index,  
    INT in align  
)  
  
INT %HI_GetColumnAlign(  
    INT in refId,  
    INT in index  
)
```

Parameters

refId	Reference to a displayer (reference variable).
index	Serial number of a column.
align	Parameter may get this values. 0 - default alignment 1 - align left 2 - center 3 - align right

Description

The function sets a text alignment to whole column in **Browser** displayer.



Related pages:

- [Graphic object manipulation functions](#)
- [Function arguments - types](#)