

HI_GetColumnMask

%HI_GetColumnMask, %HI_SetColumnMask functions

Functions

The function **%HI_SetColumnMask** sets the format mask for column in display of [Browser](#) type.

The function **%HI_GetColumnMask** gets back the format mask for column in display of [Browser](#) type ([control function](#)).

Declaration

```
%HI_SetColumnMask(  
    INT in refId,  
    INT in index,  
    TEXT in mask  
)  
  
TEXT %HI_GetColumnMask(  
    INT in refId,  
    INT in index  
)
```

Parameters

refId	Reference to graphic object (reference variable).
index	Serial number of row.
mask	Format mask.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)