

HI_GetColumnOrder

%HI_GetColumnOrder, %HI_SetColumnOrder functions

Function

The function **%HI_SetColumnOrder** sets a visible column order in displayer of [Browser](#) type or [Logging](#).

The function **%HI_GetColumnOrder** gets back a visible column order in displayer of [Browser](#) or [Logging](#) type ([control function](#)).

Declaration

```
%HI_SetColumnOrder(  
    INT in refId,  
    INT in index,  
    INT in order  
)  
  
INT %HI_GetColumnOrder(  
    INT in refId,  
    INT in index  
)
```

Parameters

refId	Reference to displayer (reference variable).
index	Column consecutive number in structure.
order	Visible column order.

Description

In [Browser](#), the columns are configured in **D2000 CNF**, but in [Logging](#), the sequence of columns is following:

Sequential numbers of [Logging](#) column:

1. Name
2. Description
3. Event_rising_time
4. User
5. Old_value
6. New_value
7. Priority
8. Incident
9. Log_type



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)