

HI_SetColumnMasterEditable

%HI_GetColumnMasterEditable, %HI_SetColumnMasterEditable functions

Function The **%HI_SetColumnMasterEditable** function disables to change a text in the column in the display of the [Browser](#) type (overloads the function [%HI_SetEditEnable](#))/cancels the overloading and enables to change the text in particular column as defined by the function **%HI_SetEditEnable** ([control function](#)).

The **%HI_GetColumnMasterEditable** function gets the current status of overloading that is defined by **%HI_SetColumnMasterEditable**.

Declaration

```
%HI_SetColumnMasterEditable(  
    INT in refId,  
    INT in col,  
    BOOL in bEnable  
)  
  
BOOL %HI_GetColumnMasterEditable(  
    INT in refId,  
    INT in col  
)
```

Parameters

refId	Reference to graphic object (reference variable).
col	Column in Browser.
bEnable	@TRUE - enables the graphic object @FALSE - disables the graphic object

Description The **%HI_SetColumnMasterEditable** function disables to change a text in the column in the display of the [Browser](#) type - the parameter *refId* defines the name of the reference variable for Browser. When *bEnable* parameter is @FALSE, it overloads the **%HI_SetEditEnable** function (disables its functionality).


The **%HI_GetColumnMasterEditable** function gets the current status of overloading of editing which is set by **%HI_SetColumnMasterEditable**. The return value @TRUE does not mean that the column can be edited, but the column fields are controlled by **%HI_SetEditEnable**. @FALSE means the functionality of **%HI_SetEditEnable** function is disabled and the text in the column object cannot be changed.

The behavior of Master functions is described in the chapter Master functions.

Example

```
ENTRY OnLogOn(IN TEXT _userName, IN BOOL _bLogOn)  
    IF _bLogOn THEN  
  
        ;when a user is logged on, a text in column can be edited  
        %HI_SetColumnMasterEditable(_Text,@TRUE)  
    ELSE  
  
        ;when a user is logged off, the access to a text in column is disabled  
        %HI_SetColumnMasterEditable(_Text,@FALSE)  
    ENDIF  
END OnLogOn
```

Note This function is also in [%HIX_ version](#).

 **Related pages:**

[Graphic object manipulation functions](#)
[Function arguments - types](#)