

HI_SetZoom

%HI_SetZoom function

Function

The function sets ZOOM and Layer according to zoom from the script.

Declaration

```
%HI_SetZoom(  
    REAL in _scale,  
    INT in _x,  
    INT in _y  
)
```

Parameters

scale	Zoom out / zoom in toward the drawing ratio 1:1.
x	X co-ordinate of the required zoom centre.
y	Y co-ordinate of the required zoom centre.

Note 1

ZOOM is adjusted according to visibility of the close-up view from Picture and the area out of Picture will not be displayed.

Setting the parameters -1, -1, the actual co-ordinates of Picture centre will be unchanged.

Note 2

This function is available also in [%HIX_version](#).



Related pages:

[Active picture manipulation functions](#)
[Function arguments - types](#)