

# HI\_SetPictureWindowState

## %HI\_SetPictureWindowState, %HI\_GetPictureWindowState functions

---

### Function

The function **%HI\_SetPictureWindowState** changes the state of picture window.

The function **%HI\_GetPictureWindowState** gets the state of picture window.

### Declaration

```
%HI_SetPictureWindowState(  
    INT in _newWinState  
)
```

```
%HI_GetPictureWindowState()
```

### Parameters

<b>_newWinState</b>	0 - cancels the maximized or minimized picture window 1 - maximizes the picture window 2 - minimizes the picture window
---------------------	---

### Description

The function **%HI\_SetPictureWindowState** changes the state of picture window into maximized, minimized or cancels the used status.

The function **%HI\_GetPictureWindowState** gets the state of picture window. It is a number from the range of 0-2. The meaning is following:

0 - normal, the picture window is neither maximized or minimized

1 - picture window is maximized

2 - picture window is minimized

### Example

```
%HI_SetPictureWindowState(1)
```

```
_i := %HI_GetPictureWindowState()
```



#### Related pages:

[Active picture manipulation functions](#)  
[Function arguments - types](#)