

HI_SetPLineNumItems

%HI_SetPLineNumItems function

Function

The function sets number of line segments in polyline from the script.

Declaration

```
%HI_SetPLineNumItems(  
    INT in _refId,  
    INT in _num  
)
```

Parameters

refId	Reference on displayer (reference variable).
num	Number of line segments.

Note

Setting the number of line segments in polyline:

- In the case that less line segments are defines as it is set then the length of new lines is 0 on X /Y axis.
- The lines are set with the functions [Hi_SetdistX](#), [Hi_SetdistY](#).
- The lines must be added first, then it is possible to set them.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)