

# HI\_SetSelEF

## %HI\_SetSelEF function

### Function

The function retrieves a current cursor position (row/column) within the windows control [Text entry field](#).

### Declaration

```
%HI_SetSelEF(  
    INT in refEntryField,  
    INT in bPos,  
    INT in ePos  
)
```

### Parameters

<b>refEntryField</b>	Reference to <i>Entry field</i> ( <a href="#">reference variable</a> ).
<b>bPos</b>	Beginning of selection.
<b>ePos</b>	End of selection.

### Description

If the beginning is 1 and the end is 0, all the text in the edit control is selected. If the beginning is 0, any current selection is deselected.



#### Related pages:

[Graphic object manipulation functions](#)  
[Function arguments - types](#)