

HI_GetHiSizeX

%HI_GetHiSizeX function

Function

The function **%HI_GetHiSizeX** gets back the horizontal window size of the HI process.

Declaration

```
INT %HI_GetHiSizeX()
```

Parameters

No parameters.

Description

The function gets back the horizontal window size of the HI process.

**Related pages:**

[Active picture manipulation functions](#)

[Picture local variables](#)

[Function arguments - types](#)