

## **HI\_GetCurrZoomY**

## %HI\_GetCurrZoomY function

<b>Function</b>	The function finds out current zoom of picture on axis Y.
<b>Declaration</b>	<pre>REAL %HI_GetCurrZoomY( )</pre>
<b>Parameters</b>	No parameters.
<b>Note</b>	This function is available also in the <a href="#">%HIX_ version</a> .



## Related pages:

## Active picture manipulation function Function arguments - type