

LNG_GetCurrLngIdx

%LNG_GetCurrLngIdx function

Function

The function returns the identifier of the current language.

Declaration

```
INT LNG_GetCurrLngIdx( )
```

Parameters

None.

Return value

Return value is of the **Int** type.

Description

A current language is set by a registered user in context of the [D2000 HI](#) process.
In context of the [D2000 EventHandler](#) process the language is set by called script in RPC procedure execution. In other case the language is undefined.

**Related pages:**

[ESL extended functions](#)
[Function arguments - types](#)
[%LNG Translate function](#)