

HI_ShowLine

%HI_ShowLine function

Function The function **%HI_ShowLine** allows to show/hide the graphic flow in the display of [Graph](#) or [XY Graph](#) types ([Control function](#)).

Declaration

```
%HI_ShowLine(
    INT in refId,
    INT in index,
    BOOL in bShow
)
```

Parameters

refId	Reference to displayer (reference variable).
index	Serial number of the graphic flow.
bShow	@TRUE - show the graphic flow. @FALSE - hide the graphic flow.

Description The graph must be placed in the picture, where the parameter *refId* is the reference variable of the graph. The parameter *index* determines the serial number of the graphic flow (numbering from 1). The parameter *bShow* defines whether the graphic flow will be shown (@TRUE) or hidden (@FALSE).

 **Related pages:**

[Graphic object manipulation functions](#)
[Function arguments - types](#)