

HI_ShowAutoCompleteList

%HI_ShowAutoCompleteList function

Function %HI_ShowAutoCompleteList function shows AutoComplete List in the windows control of [Entry field](#) type.

Declaration

```
%HI_ShowAutoCompleteList(  
    INT in refId,  
    in refToColumn,  
    in recordVal  
)
```

Parameters

refId	Reference to graphic object (reference variable).
refToColumn	Reference to column, which must be of Text type.
recordVal	Local variable of RECORD type. Definition of structure must contain one column of TEXT type.

Description

This function shows AutoComplete List with the items that are defined in the parameter `_recordVal`. The function is used only for Windows control of [Entry field](#) type.

[Example of use](#)



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)