

HI_SetGraphLineStat

%HI_SetGraphLineStat function

Function

The function sets the statistic function displayed in the **Universal** column for given object in the graph table ([control function](#)).

Declaration

```
%HI_SetGraphLineStat(  
    INT in refId,  
    INT in lineNr,  
    INT in statFnct  
)
```

Parameters

refId	Reference (reference variable) to displayer of Graph type.
lineNr	Serial number of graphic flow.
statFnct	Type of statistic function. Possible values: <ul style="list-style-type: none">• 1 - minimum• 2 - maximum• 3 - last value• 4 - sum• 5 - average <p>Note: Value other than abovementioned disables the statistics, i.e. the Universal column will not show any value.</p>

Description

The function sets the statistic function specified by the parameter *statFnct* for object *lineNr*. Result if of the statistic function is to be shown in the table of displayer of Graph type (parameter *refId*) - the **Universal** column - for given object.

Note

More information - the parameter [Table columns](#) in the configuration of graphs.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)