

HI_SetGraphRowNr

%HI_SetGraphRowNr function

Old name

%HI_SetDiatRowNr

Function

The function **%HI_SetGraphRowNr** sets the number (index) of the displayed row of structured object in active objects of the graph which is connected to the displayer of [Graph](#) type ([Control function](#)).

Declaration

```
%HI_SetGraphRowNr(  
    INT in refId,  
    INT in rowIdxInt  
)
```

Parameters

refId	Reference to graphic object (reference variable).
rowIdxInt	Number of the structured object row.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)