

HI_SetColumnWidth

%HI_GetColumnWidth, %HI_SetColumnWidth functions

Function The function **%HI_SetColumnWidth** sets the width of the specified column in the displayer of [Browser](#) or [Logging](#) type.

The function **%HI_GetColumnWidth** returns the width of the specified column in the displayer of [Browser](#) or [Logging](#) type ([control function](#)).

Declaration

```
%HI_SetColumnWidth(  
    INT in refId,  
    INT in index,  
    INT in width  
)  
  
INT %HI_GetColumnWidth(  
    INT in refId,  
    INT in index  
)
```

Parameters	refId	Reference to a displayer (reference variable).
	index	Serial number of column.
	width	Column width. The parameter can contain optional values. The values of 0 and -1 set the column width as follows on condition that the index=0: <ul style="list-style-type: none">• 0 - sets the column width by the texts in the column as well as the column header (it holds for all the columns)• -1 - sets the column width by the texts in the column, text in the column header is ignored (it holds for all the columns)

Description In **Browser**, the columns are configured in [D2000 CNF](#), but in **Logging**, the sequence of columns is following:

Sequential numbers of Logging column:

1. Name
2. Description
3. Event_rising_time
4. User
5. Old_value
6. New_value
7. Priority
8. Incident
9. Log_type

 **Related pages:**

[Graphic object manipulation functions](#)
[Function arguments - types](#)