

HI_InsertTextEF

%HI_InsertTextEF function

Function

The function inserts a text into current position of the windows control [Text entry field \(control function\)](#).

Declaration

```
%HI_InsertTextEF(  
    INT in refEntryField,  
    TEXT in text  
)
```

Parameters

refEntryField	Reference to <i>Entry field</i> (reference variable).
text	Text to be inserted.

Description

If several characters are selected in the windows control the inserted text will replace them.
Example:

A screenshot of a Windows-style text input field. The text "Text will be replaced Text" is visible. The word "will be replaced" is highlighted with a blue selection bar, indicating it is selected for replacement.

Example

```
%HI_InsertTextEF(_refEntryField,"will be inserted")
```



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)