

# HI\_InsertTextEF

## %HI\_InsertTextEF function

### Function

The function inserts a text into current position of the windows control [Text entry field \(control function\)](#).

### Declaration

```
%HI_InsertTextEF(  
    INT in refEntryField,  
    TEXT in text  
)
```

### Parameters

<b>refEntryField</b>	Reference to <i>Entry field</i> ( <a href="#">reference variable</a> ).
<b>text</b>	Text to be inserted.

### Description

If several characters are selected in the windows control the inserted text will replace them.  
Example:



### Example

```
%HI_InsertTextEF(_refEntryField,"will be inserted")
```



#### Related pages:

[Graphic object manipulation functions](#)  
[Function arguments - types](#)