

HI_GraphLineRefresh

%HI_GraphLineRefresh function

Function

The function **%HI_GraphLineRefresh** rereads data of graphic flow in displayer of **Graph** type ([Control function](#)).

Declaration

```
%HI_GraphLineRefresh(  
    INT in refId,  
    INT in lineNr  
)
```

Parameters

refId	Reference to displayer (reference variable).
index	Serial number of the graphic flow.

Description

The function rereads (refreshes) data for the graphic flow specified by the parameter *lineNr*. If the parameter *lineNr*=0, the function rereads data for all graphic flows of the displayer.

Note

Data rereading will not show information (table) on the [graph initialization](#) and defined axis zoom will remain unchanged.



Related pages:

- [Graphic object manipulation functions](#)
- [Function arguments - types](#)