

# HI\_AXGetParam

## %HI\_AXGetParam, %HI\_AXSetParam functions

---

### Functions

The function **%HI\_SetParam** sets the parameter defined by the serial number *index* to the value defined by the parameter *value*.

The function **%HI\_GetParam** retrieves the value of the parameter defined by the parameter *index*.

### Declaration

```
%HI_SetParam(  
    INT in index,  
    UNIVAL in value  
)  
  
UNIVAL%HI_GetParam(  
    INT in index  
)
```

### Parameters

|              |                            |
|--------------|----------------------------|
| <b>index</b> | Parameter's serial number. |
| <b>value</b> | Parameter value to set.    |



#### Related pages:

[ActiveX object manipulation functions](#)  
[Function arguments - types](#)