

# Access to the values of D2000 System objects

In **D2000 System** you can find two different types of information source. There are current values of object (live values) and archive objects that represent a value history in a time depth. Both the access to these values and work with them are different.

A decimal separator of real numbers is placed in the first character of a text string that is placed in registry:

HKEY\_CURRENT\_USER\Software\Ipesoft\D2000V80\D2DDE\RealSeparator.

If it does not exist or is empty, the separator uses the settings of an operational system (Regional Settings).



## Related pages:

[Instantaneous values](#)

[Archive values](#)