

Start Parameters (Starting System Console)

D2000 System Console - start parameters

When you start the [D2000 System Console](#) process, you can use the start parameters described in the table below.

Parameter	Meaning
/ASE	HOT server switching (manual or automatic).
/ASG<group>	Automatic HOT server switching. The parameter <i>group</i> defines the name of a redundant group.
/ASI<interval>	Automatic HOT server switching. The parameter <i>interval</i> defines the time interval, after the lapse of which the HOT server is to be switched.



Related pages:

[D2000 System Console](#)