


# Graphic Objects (GrEditor Settings)

## GrEditor settings - Graphic objects

The tab **Gr. Objects** allows setting some of the parameters for creating and editing the graphic objects.

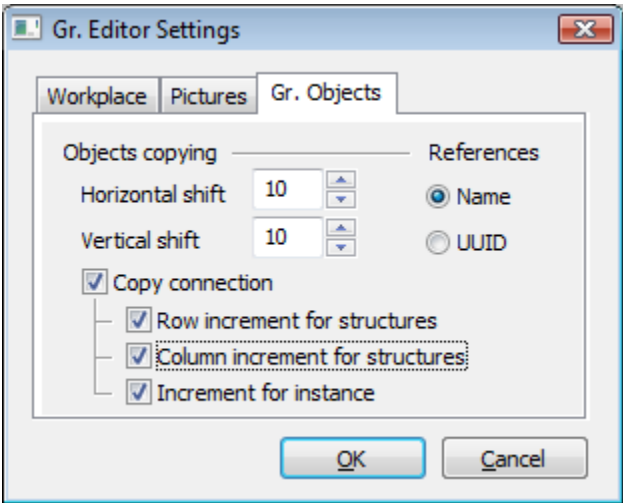

The meaning of the parameters included in the tab **Gr. Objects** is listed in the following table.

Parameter	Meaning
Horizontal shift	Sets a horizontal shift of a copy from the original (copied) object.
Vertical shift	Sets a vertical shift of a copy from the original (copied) object.
References	Method of checking the references to D2000 objects: <ul style="list-style-type: none"><li>• Name - by object name</li><li>• UUID - by object UUID</li></ul> The meaning of this parameter is when copying the objects between gr. editors that run on different applications.
Copy connection	Enables/disables to copy the connection parameters when copying the graphic objects.
Row increment for structures	Enables/disables to increase the row number when copying the connections to structures.
Column increment for structures	Enables/disables to increase the column number when copying the connections to structures.
Increment for instance	Enables/disables to increase the instance number when copying the graphic objects.



**Related pages:**

[Graphic Editor settings](#)