


Pictures (GrEditor Settings)

GrEditor settings - Pictures

The tab **Pictures** allows setting the parameters of the grid. For more information on the grid, see the topic [Grid](#).

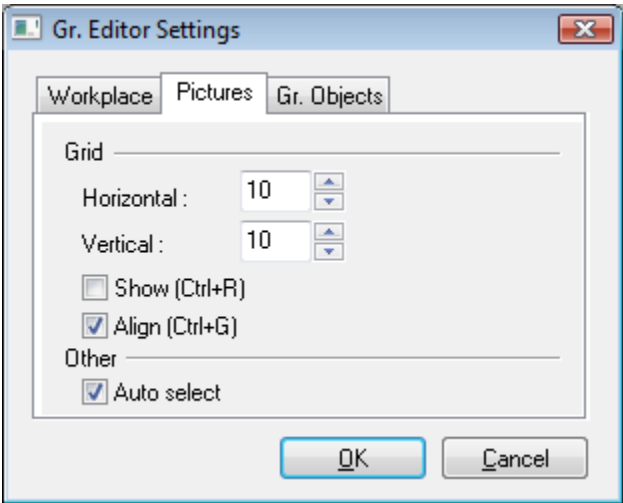

A description of the parameters included in the tab **Pictures** is listed in the following table.

Parameter	Description
Horizontal	Sets a horizontal spacing between grid points.
Vertical	Sets a vertical spacing between grid points.
Show	Shows the grid.
Align	Enables the alignment of the graphic objects to the grid.
Auto select	Automatically selects the graphic object after its creation.



Related pages:

[Graphic Editor settings](#)