

# ConfigDone

## Declaration

```
unsigned int _stdcall ConfigDone(struct StationPar * St)
```

## Parameters

St	Pointer to <a href="#">StationPar</a> structure.
----	--

## Description

The function **ConfigDone** (`_ConfigDone@4` in the *Stdcall* call convention) is optional. It is called only once for a station after the definition callings [InitStation](#) and [InitStation](#) are finished. The sequence of the definition callings [InitStation](#), [InitPoint](#) and **ConfigDone** is as follows:

- At first, there is called the function [InitStation](#),
- then the function [InitPoint](#) is called for all I/O tags of particular station,
- then the functions [InitStation](#) and [InitPoint](#) are called for other stations,
- finally, the function **ConfigDone** is called for all the stations.

## Return code

Code	Description
RQ_OK	Request has been executed OK.
RQ_ERR	An error occurred (device does not communicate or is out of order, or there is another error).
RQ_IGNORED	The function was ignored and the station status is not changed.



### Related pages:

[D2000 KomAPI - interface functions](#)