

# HI\_SetRectRounding

## %HI\_SetRectRounding function

**Funkcia** Function %HI\_SetRectRounding sets the rounding of the corners of rectangles, the text in the rectangle with the background and the edges of windows controls.

**Deklarácia**

```
%HI_SetRectRounding(  
  INT in _refId,  
  INT in _rounding1,  
  [, INT in _rounding2  
  , INT in _rounding3  
  , INT in _rounding4]  
)
```

**Parametre**

_refId	Reference to graphic object ( <a href="#">reference variable</a> ).
_rounding1	rounded corners upper left
_rounding2	optional corner rounding parameter upper right, if not specified _rounding1 is used
_rounding3	optional corner rounding parameter upper down, if not specified _rounding1 is used
_rounding4	optional corner rounding parameter left down, if not specified _rounding1 is used

**Poznámka** Parameters \_rounding2,\_rounding3,\_rounding4 all or none must be entered.

**Príklad**

```
; corner roundings  
%HI_SetRectRounding(_RFID_BOX, 2, 3, 4, 5)  
%HI_SetRectRounding(_RFID_BOX, 0, 0, 0, 0)  
  
; shortened  
%HI_SetRectRounding(_RFID_BOX, 2) ; set all to 2  
%HI_SetRectRounding(_RFID_BOX, 0) ; switch off
```



**Related pages:**

[Graphic object manipulation functions](#)  
[Function arguments - types](#)