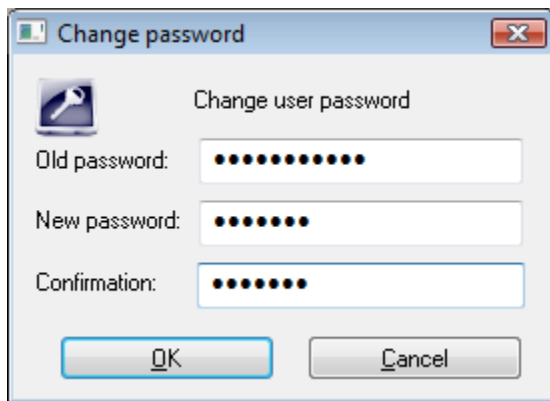


# Change Password (Access to the HI Process)

## Change password

User's logon password can be simply changed. Selecting the **Change Password** from the **System** menu opens the following dialog box.

A screenshot of a Windows-style dialog box titled "Change password". The dialog has a blue title bar with a close button (X) in the top right corner. Inside the dialog, there is a small icon of a wrench and a screwdriver. The text "Change user password" is displayed. Below this, there are three input fields: "Old password:" with 12 dots, "New password:" with 8 dots, and "Confirmation:" with 8 dots. At the bottom, there are two buttons: "OK" and "Cancel".

Change password

Change user password

Old password: [12 dots]

New password: [8 dots]

Confirmation: [8 dots]

OK Cancel

### To change user password:

1. Type the old password you want to change into the **Old password** input edit box.
2. Type a new password into the **New password** edit box and then also into **Confirmation** input edit box to verify correctness of typing.
3. Click the **OK** to confirm your changes.



#### Related pages:

[Access to the HI process](#)