

# ReadPointValue

## Declaration

```
unsigned int _stdcall ReadPointValue(struct StationPar * St, struct PointPar * Pt)
```

## Parameters

St	Pointer to the <a href="#">StationPar</a> structure.
Pt	Pointer to the <a href="#">PointPar</a> structure.

## Description

The function **ReadPointValue** (`_ReadPointValue@8` in the *Stdcall* call convention) is optional and it is called to get the value of defined [I/O tag](#) after writing a new value using the function [WritePointValue](#).

## Return code

Code	Description
RQ_OK	Request executed OK.
RQ_ERROR	An error occurred (the device does not communicate or is out of service, or there is any error), the station changes into the state COM_ERR, or HARD_ERR after returning from the function.
RQ_IGNORED	The function was ignored and the station status is not changed.



### Related pages:

[D2000 KomAPI - interface functions](#)