

ChangeLineMode

Declaration

```
void (_stdcall *ChangeLineMode)(HOBJ LnID, unsigned int LineMode);
```

Parameters

LineID	Line ID.
LineMode	Required line mode within the range of 1...4.

Description

The function sets the required mode of the given asynchronous line. The function can only be used for [Serial](#) or [MOXA IP Serial Library](#) line category and override the line mode setting on the station.



Related pages:

[D2000 KomAPI - call-back functions](#)