

InitStation

Declaration

```
unsigned int __stdcall InitStation(struct StationPar * St)
```

Parameters

St	Pointer to StationPar structure.
----	--

Description

The function `InitStation` (`_InitStation@4` in the Stdcall calling sequence) is optional. A pointer to a `StationPar` structure with a definition of the station parameters is the parameter of the function. The function is called at starting of the [D2000 KOM](#) process and later after a change of the station parameters in the [D2000 CNF](#) process .

Return code

Code	Description
RQ_OK	Request executed OK.
RQ_ERR	An error occurred (device doesn't communicate, out of order, or another error).
RQ_IGNORED	The function was ignored and the station status is not changed.



Related pages:

[D2000 KomAPI - interface functions](#)