


Control the Analog and Integer Output I/O Tags (AO, CO) (HI /Monitoring and Controlling of D2000 System Objects)

Controlling analog and integer outputs (AO, CO)

Clicking a graphic object with an I/O Tag of AO (Analog output) or CO (Integer output) types connected to control (the user has sufficient access rights) opens the control window that consists of two tabs:

[Object status and control](#)
[Object information](#)

Object status and control

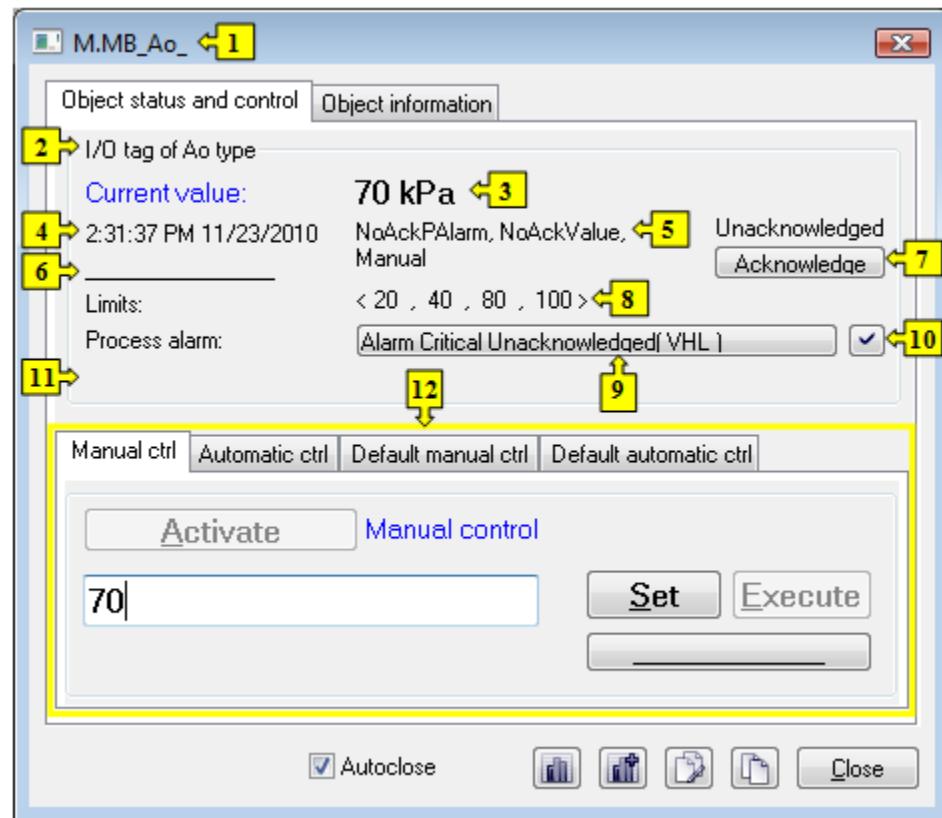


1	Object name.
2	Object description.
3	Current value and technical units of the object. Note: If the object is in the <i>Default value</i> state (see the tabs Default manual ctrl or Default automatic ctrl), there is displayed the text Default value instead of Current value .
4	Value time.
5	Object states.
6	Object value flags (user attributes). There are shown the flags, the value of which is TRUE.
7	Acknowledges the object value.
8	Limits defined for the object: <VLL, LL, HL, VHL> VLL - Very Low Limit (the lowest limit) LL - Low Limit HL - High Limit VHL - Very High Limit (the highest limit)

9	Opens the dialog box to control the current process alarm .
10	Acknowledges given process alarm.
11	Telemetric value of the object. Note: Value is shown if the object is in the <i>Default value</i> state (see the tabs Default manual ctrl or Default automatic ctrl).
12	Part of the control window for controlling the output and default value .
	Opens a dynamic graph of the object.
	Opens a multigraph of the object.
	Edit object. Only when process CNF is running.
	Inserts the object into the current page of the Browser if opened. If is not opened, clicking the button opens it and inserts the object into the first page of the Browser.
	Copies the object name to Clipboard.

The bottom of the tab contains the tabs allowing to control the object output (the tabs [Manual ctrl](#) and [Automatic ctrl](#)) and default value of the object (the tabs [Default manual ctrl](#) and [Default automatic ctrl](#)).

MANUAL CTRL

The tab allows to set manually a value of the object along with user attributes (flags). It contains the button **Activate**, current object value and value time. Clicking the button **Activate** opens the dialog box to confirm the activation of the *Manual control* status for the object. After clicking the buttons **Yes** and **Execute** in that dialog box, the tab **Manual ctrl** has the following appearance:

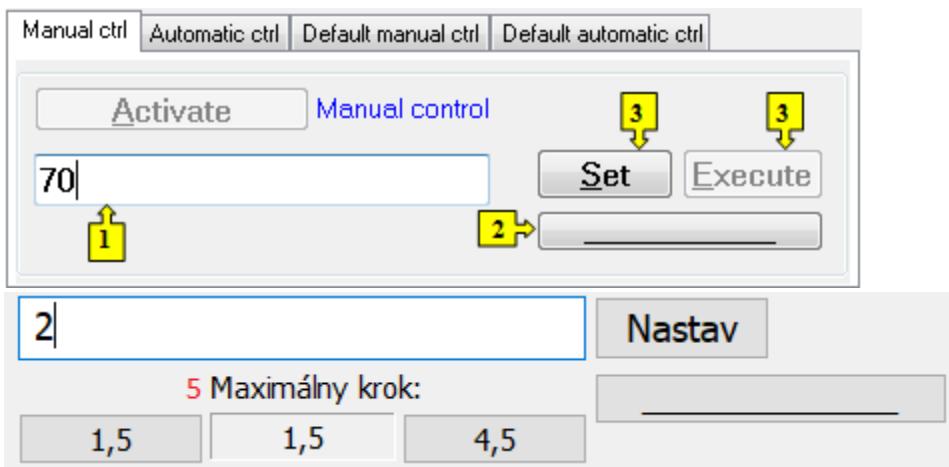

1	Input edit box to type a value (text) of the output object.
2	Opens the dialog box to set flags of the output object value.
3	Depending on the Execute button, the SET button is used as follows: <ol style="list-style-type: none"> If the Execute button is NOT in the control window, then clicking the Set button sets up given output object value along with value flags (attributes). If the Execute button IS in the control window, then clicking the Set button just "prepares" given output object value along with value flags (attributes) to set.

4	Clicking the button sets up the given output object value and value flags "prepared" to set by clicking the button Set . Note: The button Execute is in the control window, if the option Acknowledge is checked in the object configuration in the process D2000 GEEditor .
5	Maximum step - limit the maximum possible change of the entered parameter (step) <ul style="list-style-type: none"> • button to set the lower limit of possible change from the current value • value of the maximum possible change • button to set the upper limit of the possible change from the current value

AUTOMATIC CTRL

The tab allows to use a value of the control object as the output object value. It contains the button **Activate**, current object value and value time. Clicking the button **Activate** opens the dialog box to confirm the activation of the *Automatic control* status for the object. In the mode, the value of the output object copies the value and flags of the control object (the option **Control object** in the I/O tag configuration).

Manual ctrl	Automatic ctrl	Default manual ctrl	Default automatic ctrl						
<div style="border: 1px solid #ccc; padding: 10px; margin-bottom: 10px;"> <div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">Activate</div> Automatic control </div> <div style="border: 1px solid #ccc; padding: 5px; background-color: #f9f9f9;"> <p>Control object value:</p> <div style="border: 1px solid #ccc; padding: 2px; display: flex; align-items: center;"> 110 1 2 3 </div> <p>10:29:19 AM 11/23/2010</p> </div>									
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">1</td> <td style="padding: 2px;">Value of the control object.</td> </tr> <tr> <td style="padding: 2px;">2</td> <td style="padding: 2px;">Time of the control object value.</td> </tr> <tr> <td style="padding: 2px;">3</td> <td style="padding: 2px;">Flags (user attributes) of the control object value.</td> </tr> </table>				1	Value of the control object.	2	Time of the control object value.	3	Flags (user attributes) of the control object value.
1	Value of the control object.								
2	Time of the control object value.								
3	Flags (user attributes) of the control object value.								

DEFAULT MANUAL CTRL


The tab allows to set manually a default value of the object along with user attributes (flags). It contains the button **Activate**, current object value and value time. Clicking the button **Activate** opens the dialog box to confirm the activation of the *Default value* status for the object. After clicking the buttons **Yes** and **Execute** in that dialog box, the tab **Default manual ctrl** has the following appearance:

Manual ctrl	Automatic ctrl	Default manual ctrl	Default automatic ctrl
<div style="border: 1px solid #ccc; padding: 10px; margin-bottom: 10px;"> <div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">Activate</div> Default manual control </div> <div style="border: 1px solid #ccc; padding: 5px; background-color: #f9f9f9;"> <div style="display: flex; justify-content: space-between;"> 1 2 3 4 </div> <div style="display: flex; align-items: center; margin-top: 10px;"> 41 Set Execute </div> </div>			
<div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 10px;"> 1 2 3 4 </div> <div style="border: 1px solid #ccc; padding: 5px; background-color: #f9f9f9;"> <p>Nastav</p> <p>5 Maximálny krok:</p> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> 1,5 1,5 4,5 </div> </div>			

1	Input edit box to type a default value (text) of the object.
2	Opens the dialog box to set flags of the default value.
3	Depending on the button Execute in the control window, the button Set is used as follows: 1. If the button Execute is NOT in the control window, then clicking the button Set sets up the default value and value flags. 2. If the button Execute IS in the control window, then clicking the button Set just "prepares" the default value and value flags to set.
4	Clicking the button sets up the default value and value flags "prepared" to set by clicking the button Set . Note: The button Execute is in the control window, if the option Acknowledge is checked in the object configuration in the process D2000 GrEditor .
5	Maximum step - limit the maximum possible change of the entered parameter (step) <ul style="list-style-type: none">• button to set the lower limit of possible change from the current value• value of the maximum possible change• button to set the upper limit of the possible change from the current value

DEFAULT AUTOMATIC CTRL

The tab allows to use a value of the control object as the default value. In the mode, the value of the object copies the value of the control object (the option Control object in the I/O tag configuration). Clicking the button **Activate** opens the dialog box to confirm the activation of the *Default value* status for the object.

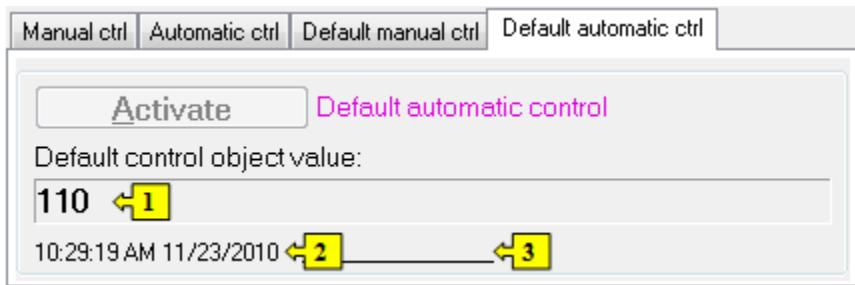

1	Value of the control object.
2	Time of the control object value.
3	Flags of the control object value.