

# Control the XY graph window (HI)

## Controlling the XY graph window

The following controls are located in the upper right corner of a XY graph window opened in the process [D2000 HI](#):



The controls are described in the following table.

	Return to the previous time close-up view (time zoom) or previous y-axis range (value zoom).
	Move y-axis one displayed range up.
	Move y-axis one displayed range down.
	Move time axis one displayed time range left.
	Move time axis one displayed time range right.
	Print the XY graph window.
	Calculate the dynamic axes range.
	Draw all axes above each other.
	Show/hide the auxiliary grid.
	Show/hide the pointer.
	Show/hide the table in the XY graph window.
	<a href="#">Graph display settings.</a>

Indicator in the upper left corner of the graph window 44.089 displays the current position of the y-axis pointer. It is displayed only if the pointer is enabled ().

**Note:**  
Audible alert (beep) when using the time or the value zoom can be disabled - see the parameter group [Graphs](#) in the **Console preferences** (or **User preferences**) dialog box - the **Beep on zoom** option).

**Related pages:**  
[Description and controlling the XY graph window](#)